

Seca Turbo - Fairing Bra Installation Instructions

BDESIGNS has no control over the installation and the condition/cleanliness of the surfaces that the Velcro adhesive tape is applied to and therefore takes no responsibility for any losses or personal injury of any kind, incurred by you or any other party.

READ DIRECTIONS THOUROUGHLY BEFORE STARTING

- Remove the front lower fairing “chin”.
- Remove the front lower left and right fairing pieces.
- The inside of the fairing components must be completely free from grease, wax, oils or any other material that can cause the Velcro tape not to adhere properly. Clean the inside of the fairing thoroughly with a gentle mineral spirit like Varsol, then wash and scrub the surfaces with hot water and dish washing detergent. Rinse with hot water and let dry thoroughly.
- If there are any areas on the inside of the fairing that have loose paint or bodywork, these must be properly patched up and sanded smooth, so the Velcro tape has a sound surface to adhere to. The Velcro sizes that are required for each area are shown in each illustration.
- For the fairing “chin”, refer to Figure 1 & 2 for installation locations. All 3 pieces of Velcro are 65mm (2 ½”). Remove the plastic backing from the back of the Velcro hook and install per instructions. Firmly press down with your fingers completely over the Velcro hook tape to ensure it is properly fastened.
- For the left lower fairing piece, refer to Figure 3, 4 & 5 for installation locations. Please note that one piece of Velcro with a slight curve cut out from it is applied in the area to the top of the circle in the fairing. There is a short piece of Velcro hook that is positioned in the bottom rear area of the fairing. Remove the plastic backing from the back of the Velcro hook and install per instructions. Firmly press down with your fingers completely over the Velcro hook tape to ensure it is properly fastened.
- For the right lower fairing piece, refer to Figure 6, 7, 8 & 9 for installation locations. Please note that one piece of Velcro with a slight curve cut out from it is applied in the area to the top of the circle in the fairing. There is also a piece of Velcro hook that has two bevels cut on the end. This piece is positioned in the bottom rear area of the fairing. Remove the plastic backing from the back of the Velcro hook and install per instructions. Firmly press down with your fingers completely over the Velcro hook tape to ensure it is properly fastened.

The Seca Turbo Fairing Bra is a snug, form-fitting Bra. Once you have applied the Bra the first time, you will become accustomed as to how you will have to adjust the Bra during installation. You will have to adjust and re-adjust the various Velcro tabs until it is fitted properly. Start by centering and applying the “Chin” area of the bra. Next, work the rear sides of the Bra that go around the back of the lower fairing. Next work the top tabs and then the bottom. Keep adjusting until the holes in the Bra reasonably match up to the holes in the fairing. Moderate pulling and stretching of the Bra to adjust it into place is normal. Once the Bra is adjusted properly push firmly on the Velcro tabs



FIGURE 1

Centre Velcro and set in from edge approximately 1/8" (3mm).



FIGURE 2

Set in from edge approximately 1/8" (3mm).

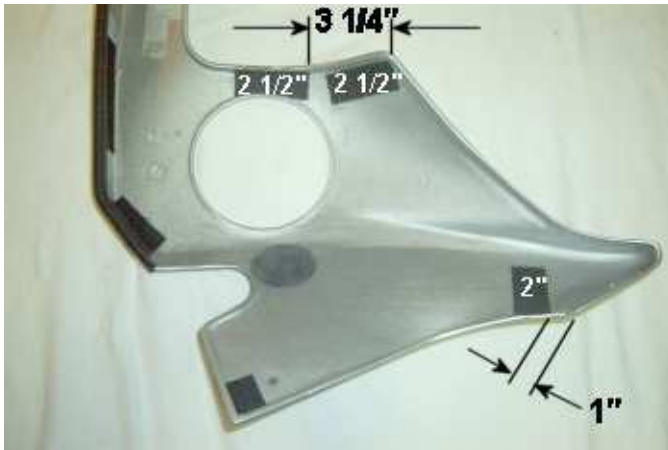


FIGURE 3

Velcro above the hole has a slight arch cut out of it. Apply Velcro in the front lower corner, with the bottom edge at right angles to the fairing edge.

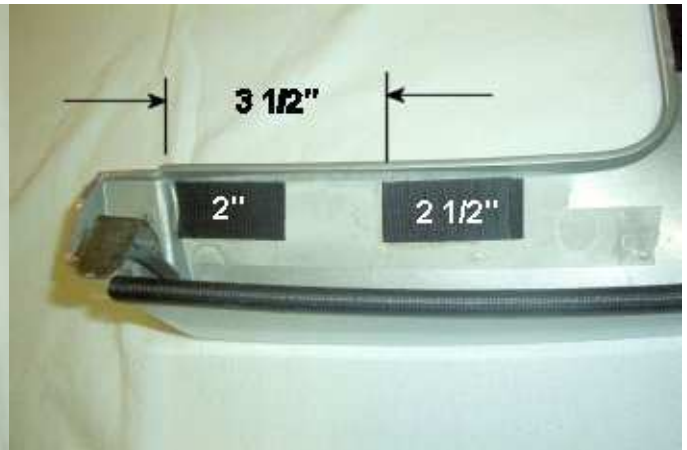


FIGURE 4

These pieces of Velcro apply only to the Standard and Sporty Bras. Ensure upper piece of Velcro is tight up against the inside top edge.

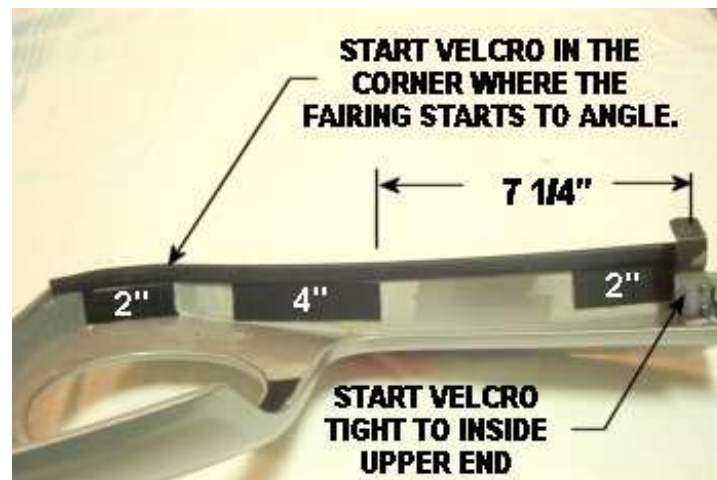


FIGURE 5

The top piece of Velcro applies only to the Standard and Sporty Bras.

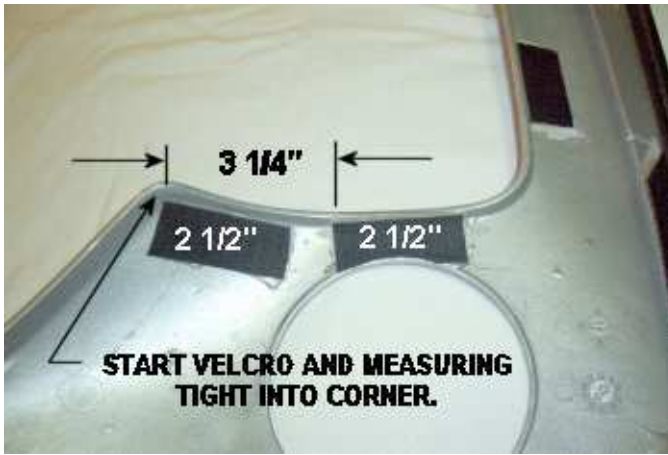


FIGURE 6

Velcro above the hole has a slight arch cut out of it.

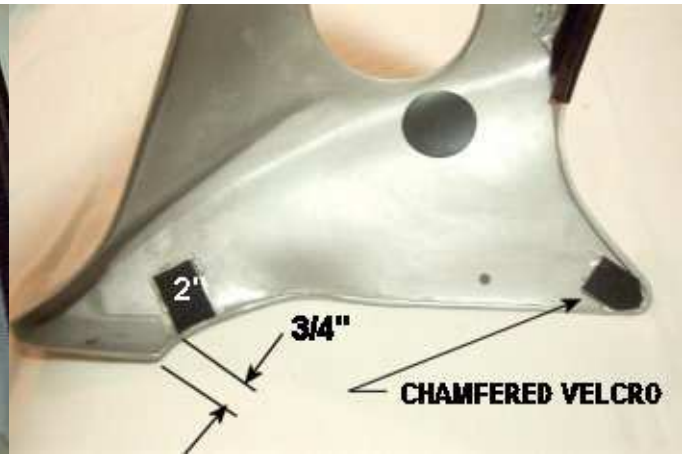


FIGURE 7

Apply Velcro in the front lower corner, with the bottom edge at right angles to the fairing edge.

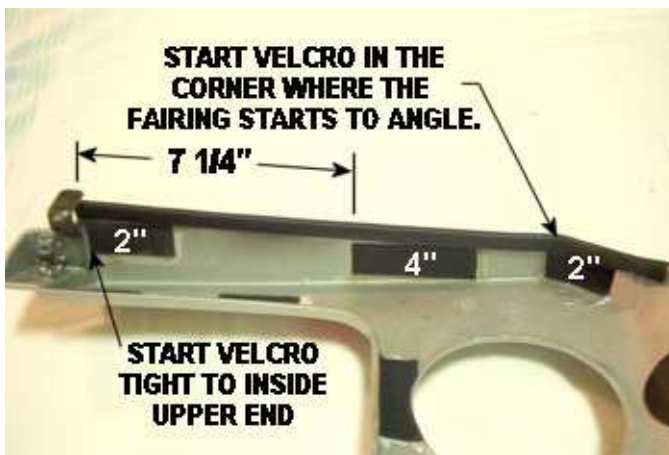


FIGURE 8

The top piece of Velcro applies only to the Standard and Sporty Bras.

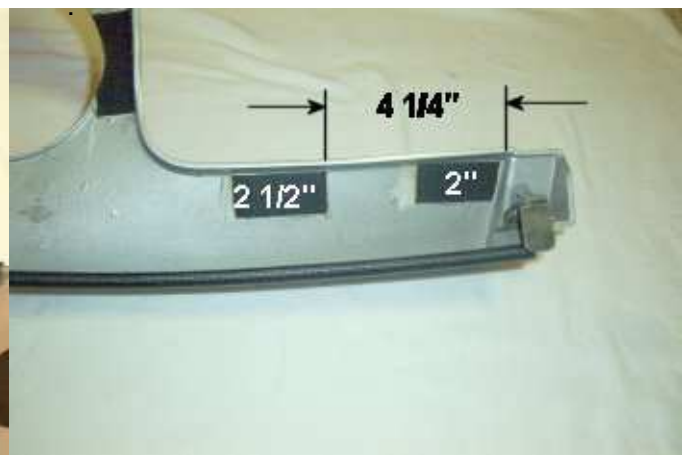


FIGURE 9

These pieces of Velcro apply on to the Standard and Sporty Bras. Ensure upper piece of Velcro is tight up against the inside top edge.